


Hydraulic Post Driver

Order Information and Accessories

Part No.	Description
801016	PLEASE NOTE HPD Master Chuck is required with the following chuck adapters
070609	3 ½" (88.9 mm) Chuck Adapter
070610	3" (76.2 mm) Chuck Adapter
070611	2 ½" (63.5 mm) Chuck Adapter
070612	2" (50.8 mm) Chuck Adapter
070613	1 ½" (38.1 mm) Chuck Adapter
070614	1" (25.4 mm) Chuck Adapter
070617	1-1 ½ lbs/ft Channel Post Chuck Adapter
070618	2-2 ¾ lbs/ft Channel Post Chuck Adapter
070619	3-4 lbs/ft Channel Post Chuck Adapter
070615	2" (50.8 mm) Heavy Chuck Adapter
	PLEASE NOTE Drive Caps are necessary to minimize damage to posts being driven.
071260	2" Drive Cap for Schedule 40 Pipe w/T-Bar and Clip
071261	2 ½" Drive Cap for Schedule 40 Pipe w/T-Bar and Clip
071262	3" Drive Cap for Schedule 40 Pipe w/T-Bar and Clip
801016	PLEASE NOTE HPD Master Chuck is also required with the following Break-Away Systems and will also require a chuck adapter and a drive cap
070832	Chuck Adapter for the Channel Post Break-Away Anchor System
070836	Drive Cap for the Channel Post Break-Away Anchor System
071014	Chuck Adapter for the Square Tube Break-Away Anchor System
071004	1 ¼" Drive Cap for the Square Tube Break-Away Anchor System
071005	1 ½" Drive Cap for the Square Tube Break-Away Anchor System
071006	1 ¾" Drive Cap for the Square Tube Break-Away Anchor System
071007	2" Drive Cap for the Square Tube Break-Away Anchor System
071008	2 ¼" Drive Cap for the Square Tube Break-Away Anchor System
071009	2 ½" Drive Cap for the Square Tube Break-Away Anchor System
Custom	4 ¼" Round Master Chuck
Custom	4 1/16" x 4 1/16" Square Master Chuck
801018	2 ½" Chuck-Loc™ w/Locking Nut System as used on Rhino Gas Drivers
	PLEASE NOTE The following adapters can only be used with the Chuck-Loc™ System
300900	1" Chuck-Loc™ Adapter
300895	1 ¾" Chuck-Loc™ Adapter
300902	2" Chuck-Loc™ Adapter

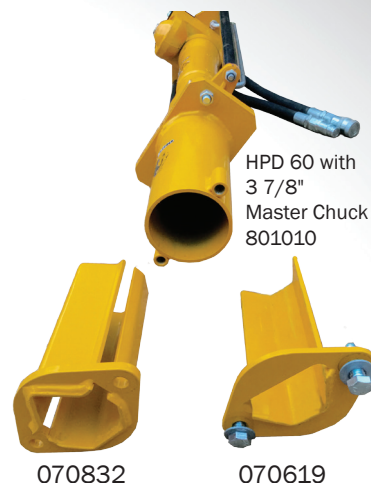

Use of optional remote valve (801011) with HPD 60.