

Appendix E 3-Way SRL-R

USER INSTRUCTIONS


Model	Length	Maximum Arrest Distance	Average Arrest Force	ANSI Standard	Lifeline	Capacity
T210030	30 ft (9 m)	54 in (1372 mm)	900 lbs (4 kN)	Z359.14-2014 Class B	3/16 in diameter 7 x 19 galvanized steel cable	310 lbs
T210060	60 ft (18 m)	54 in (1372 mm)	900 lbs (4 kN)	Z359.14-2014 Class B	3/16 in diameter 7 x 19 galvanized steel cable	310 lbs
T210100	100 ft (30 m)	54 in (1372 mm)	900 lbs (4 kN)	Z359.14-2014 Class B	3/16 in diameter 7 x 19 galvanized steel cable	310 lbs

3-WAY SELF RETRACTING LIFELINE WITH RESCUE CAPABILITY

The 3-Way Self Retracting Lifeline with Rescue Capability (SRL-R) is designed for a single user with a capacity up to 310 pounds (140 kg) including clothing, tools, etc, and comes in 30 feet (T210030), 60 feet (T210060) and 100 feet (T210100) lengths. The 3-Way SRL-Rs have a polymer housing, and utilize a $\frac{3}{16}$ inch (4.8 mm) diameter (7x19) galvanized steel cable. When dynamically tested in accordance with the requirements of the ANSI Z359.14 standard for Class B for SRLs, the 3-Way SRL-Rs have an average arrest force of less then 900 pounds (4 kN) and a maximum arrest distance of 54 inches (1372 mm).

LOAD INDICATOR

The snap hook on the cable of the SRL-R has a green indicator that appears when it is safe to use. The snap hook also contains a red load indicator. If the device has been subjected to the forces of arresting a fall, the snap hook's red load indicator will be visible and product should be removed from service.

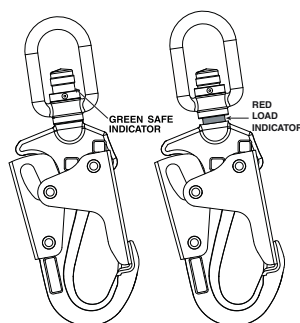




RESCUE MODE

To engage the rescue mode on the 3-Way SRL-R, pull out the hand grip on the arm. Pull button on the bottom of the arm while pulling arm away from the unit until arm clicks in place. This will engage the rescue mode of the 3-Way SRL-R.

Rescue Mode

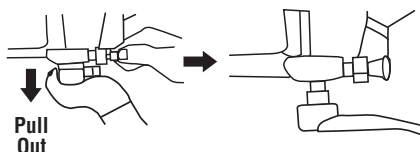


WARNING!

Never allow slack in cable while in rescue mode.

SRL MODE

Wind cable completely into housing before stowing arm. To stow arm and return to SRL mode, pull button on the bottom of the arm while pushing arm towards the unit. Pull hand grip on the arm out and collapse hand grip parallel to the arm. Attach strap to secure arm in place.

SRL Mode

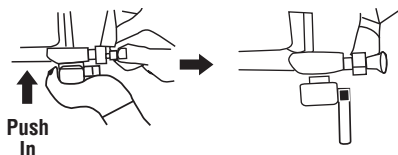




HORIZONTAL SYSTEMS

Not suitable for horizontal use or horizontal lifelines.

Appendix E 3-Way SRL-R

USER INSTRUCTIONS

LABELS

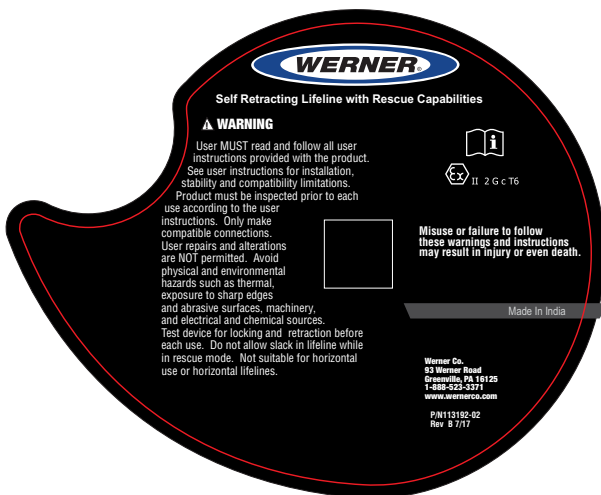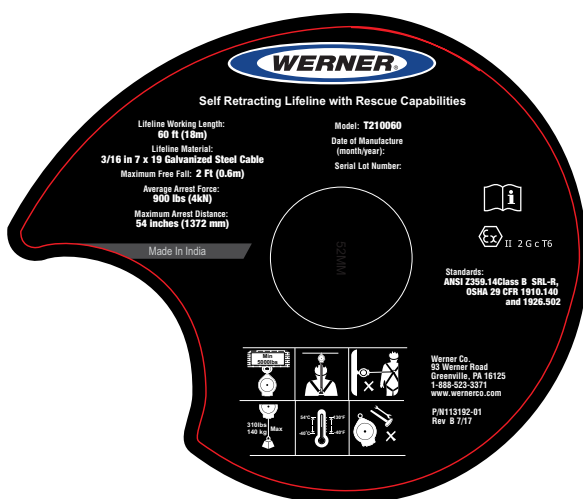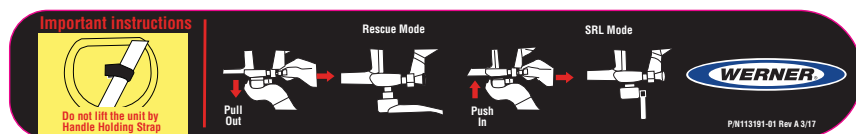

WERNER®

