

WARNING 🕰

Read and become familiar with this manual BEFORE operating unit.

Before operating this equipment, thoroughly read this set of instructions, make sure you understand them, and only then follow the step-by-step directions. Failure to do so could result in serious property damage and / or serious bodily injury.



To our valued customer,

Thank you for choosing a **Telpro Inc.** product by **PARAGON PRO** Manufacturing Solutions. We are pleased that we are able to provide equipment to make your work easier.

Our efforts are focused on producing the finest quality equipment of which we are capable. We make sure to spend extra time and effort on our design and production in order to reduce your time and effort spent using the product.

We take pride in providing the best for our customers. Quality, innovation, and excellence are all qualities this company ensures. No product is sent without being factory tested and inspected to ensure the highest quality for you.

It all began in 1972 when Roland Young designed our first product, the PANEL-LIFT® Brand Drywall Lift, and revolutionized the drywall industry. To this day we are continuously making advancements in manufacturing and design.

Thank you again for giving us the opportunity to work with you. Any questions or comments that you have are always welcome.



CONTENTS

| Warning / Instructional Information Page 1 |
|--|
| User Components |
| Replacement Parts / Parts List Page 3-5 |
| Assembly Page 6-7 |
| Operation Page 8 |
| Accessories Page 9 |
| Safety Page 10 |
| Warranty |

ALL PHOTOS ARE FOR ILLUSTRATIVE PURPOSES ONLY.

∆Warning ∆

Read and follow these warnings and the instructions that follow. Failure to do so could result in serious property damage and/or serious bodily injury.

• **BEFORE** operating this equipment, thoroughly read this set of instructions, make sure you understand them, and only then follow the step-by-step directions. **FAILURE TO READ AND FOLLOW THESE INSTRUCTIONS** could result in failure of the equipment. Failure of the equipment while the lift is raised can include a sudden and rapid lowering of the lift and load possibly resulting in serious property damage and/or serious bodily injury.

• Use and maintenance of the Cabinetizer [™] Cabinet Lift shall be limited to authorized personnel who are trained in the proper techniques for its safe operation and maintenance and who are familiar with the various hazards of overhead material handling.

•It shall be the resposibility of any and all users of the Cabinetizer [™] Cabinet lift to become familiar and comply with all:

- aspects of assembly, operation and necessary safety precautions

- applicable federal, state, and local statutes or regulations.

• The weight capacity of the Cabinetizer[™] Cabinet Lift is 300 Ibs. (136 kg). DO NOT load the unit beyond this limit. Failure to follow this warning can result in damage to the Cabinetizer[™] Cabinet Lift contributing to a sudden failure of the machine and serious property damage and/or serious bodily injury.

• **Do Not** ATTEMPT TO USE YOUR Cabinetizer[™] cabinet Lift IF ANY PART IS MISSING, DAMAGED OR WORN. ORDER A REPLACEMENT PART IMMEDIATELY. Using a Cabinetizer[™] Cabinet Lift with missing, damage or worn components can result in failure of the unit and possibly severe property damage and/or serious bodily injury.

• INSPECT THE STRAP BEFORE EACH USE. REPLACE AT THE

FIRST SIGN OF WEAR. A worn, damaged or improperly installed strap can fail resulting in a sudden and rapid lowering of the lift and the load and possibly resulting in serious property damage and/or serious bodily injury.

• **DO NOT ROLL** a loaded Cabinetizer[™] Cabinet Lift while the load is raised. Always keep the load lowered until the lift is in place beneath the space in which the cabinets will be installed.

Rolling a Cabinetizer[™] Cabinet Lift while the load is raised can result in tipping the lift and load possibly resulting in serious property damage and/or serious bodily injury.

• The Cabinetizer[™] Cabinet Lift is designed exclusively as a material lift and shall be used for no other purpose. The Cabinetizer[™] Cabinet Lift is not a personnel lift or platform and shall not be used as such. DO NOT sit or stand on any part of the Cabiinetizer[™]. Using the Cabinetizer[™] Cabinet Lift for purposes other than material lift can subject the unit to stresses and loads that it was not designed to carry. This can result in failure of the unit which may include a sudden and rapid lowering of the lift and the load possibly resulting in serious property damage and/or serious bodily injury.

• Keep body parts out from under load at all times

• Use the Cabinetizer™ Cabinet Lift only on smooth level surfaces.

• The Cabinetizer[™] Cabinet Lift is made of steel which conducts electricity. KEEP THE UNIT AWAY FROM LIVE ELECTRICAL WIRES. Failure to do so could result in electrocution.

• Use only factory authorized replacement parts. Installation of other parts can compromise the safe design of the Cabinetizer[™] Cabinet Lift and may cause failure of the unit possibly resulting in serious property damage and/or serious bodily injury.

• Do not transport an assembled Cabinetizer[™] Cabinet Lift.

• Be Observant Of Any Potentially Hazardous Conditions, such as, but not limited to:

| -Any Obstruction | -Holes |
|-------------------|----------|
| -Loose Materials | -Electri |
| -Moving Machinery | -Stairw |
| -Open ducts | -Chang |
| -Wires | -Etc. |
| | |


-Electrical installations -Stairwells -Changes in floor elevations -Etc.

• Before loading Cabinetizer[™] Cabinet Lift, **BE SURE THE MAIN UPRIGHT BOOM IS** firmly secured to the Base and the **SPLIT BOOM CONNECTOR** is fastened securely.

• Always balance the load on the Cabinetizer[™] cabinet Lift. Failure to do so can result in tipping the lift and load possibly resulting in serious property damage and/or serious bodily injury.

Questions? - Call Paragon Pro Manufacturing Solutions Customer Service at 1-800-448-0822 or 1-800-441-0551

USER COMPONENTS

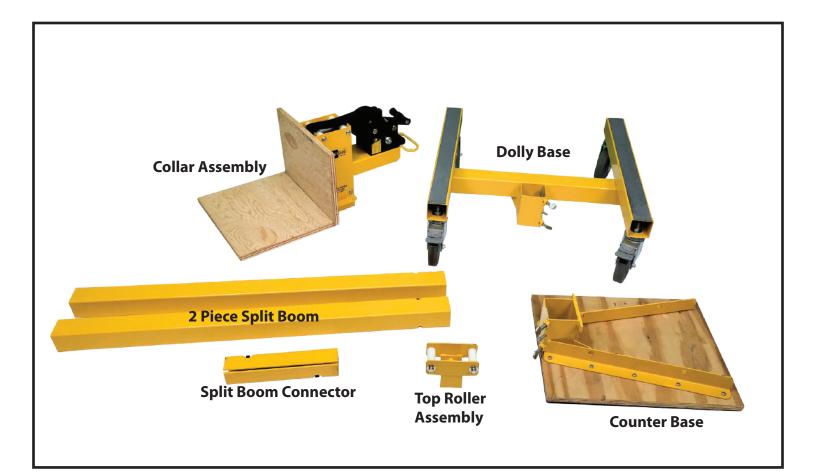

Maintaining your Cabinetizer™



Store the cabinetizer[™] Cabinet Lifter in a dry place.




Take reasonable care to avoid damaging the Cabinetizer™ Cabinet Lifter when transporting it. Do not transport the Cabinetizer™ while it is assembled.


P Do not hammer on any members or components of the Cabinetizer[™] Cabinet Lifter.



Avoid damage to edges, surfaces, and ends of the Boom Tubes. Do not drop them on the floors or hard surfaces. Smooth, straight edges will allow the Collar of the Cabinetizer[™] to travel freely up and down the boom.

Replacement Parts

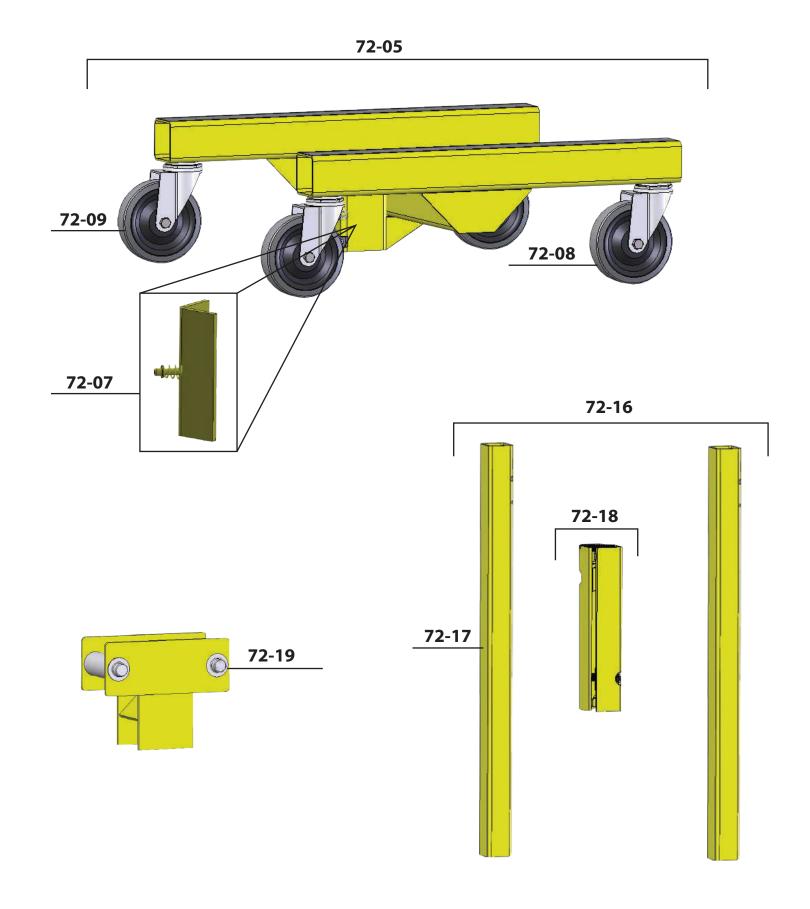

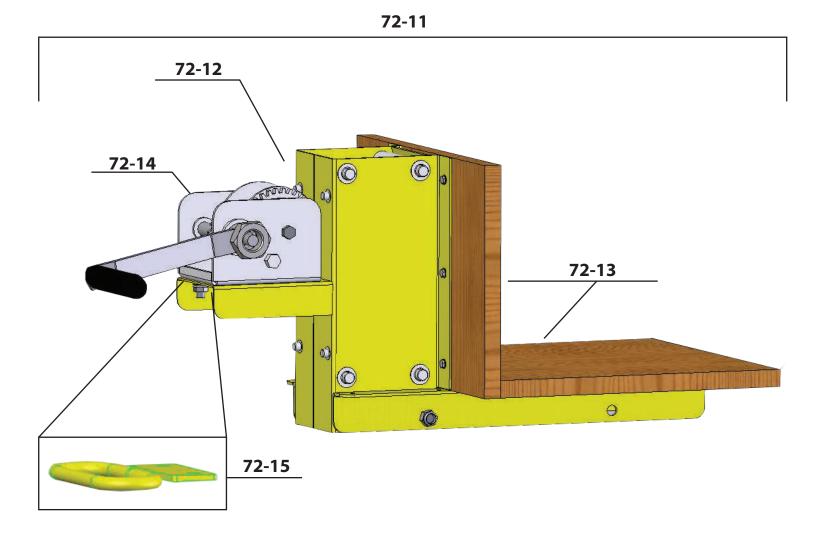

| Part # | Description |
|--------|--|
| 72-11 | Complete Collar Assembly |
| 72-12 | 2" x 14' Nylon Strap w/ Fasteners |
| 72-13 | Seat Set of Wood w/ Fasteners |
| 72-14 | Winch w/ Handle |
| 72-15 | Collar Handle |
| 72-16 | Complete 2 - Piece Split Boom w/ Connector |
| 72-17 | 1/2 Boom Tube |
| 72-18 | Split Boom Connector |
| 72-19 | Top Roller Assembly |
| 72-05 | Complete Dolly Base |
| 72-06 | Dolly Base Frame with Brake & Clamp V w/out ca |
| 72-07 | Clamp V w/ Fasteners |
| 72-08 | Caster w/ Fasteners |
| 72-09 | Brake Caster w/ Fasteners |
| 72-10 | V-Clamp Thumb Screws (Set of 4) |

ASSEMBLY - Dolly Base Configuration



1. Install either of the boom sections into the dolly base. Make sure the holes in the corner of the tube are up.



2. Tighten both lock screws on the dolly base to hold the boom tube securely.



4. Insert the split boom connector. Align the set screws with the access holes in the boom tube.



5. Fit the second boom section over the split boom connector. Align the corners access holes with those of the lower section.



3. Let out about 2' loop of strap on the Collar Assembly and slide the Collar Assembly over the boom tube.

MAKE SURE the seat of the Collar Base Assembly is oriented on the same side as the longer base legs as shown.



6. Using the hex key stored on the collar assembly, tighten both set screws on the split boom connector securely.



7. Insert the top roller assembly then position the strap over the top rollers, raising the Collar up the Boom.

ASSEMBLY - Counter Base Configuration



1. Install either of the boom sections into the Counter Base.




2. Tighten the thumb screws on the Counter Base to hold the Boom firmly in place. Install either of the boom sections into the Counter Base.



3. Let out a 2' loop of strap on the Collar Assembly and slide the Collar Assembly over the Boom Tube.

MAKE SURE the seat of the Collar Assembly is orientated on the same side as the Counter Base as shown.

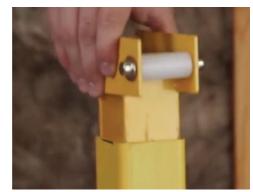

4. Insert the top roller assembly.




5. Position the strap over the top roller, making sure that it is aligned straight with no twists.



Your Cabinetizer[™] is now ready for use.

INSTALLING UPPER CABINETS (before base cabinets)

INSTALLING UPPER CABINETS (over existing base cabinets)

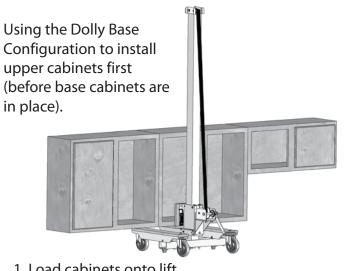

1. Load cabinets onto lift.




2. Operate the winch to raise cabinets into place. Lock the brakes on the casters and level the cabinets and fasten in place.



The Dolly Base can be used independantly to move Cabinets

Using the Counter Base Configuration to install upper cabinets second (when base cabinets are in place).

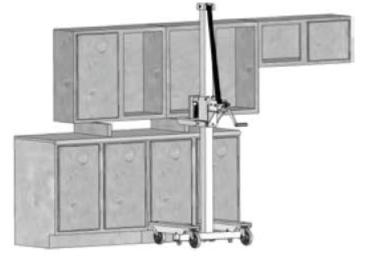

1. Start by using the Dolly Base Assembly to raise the upper cabinets to block (approx. 9" high, blocks not included) on the base counters.



2. Use the Counter Base Configuration for final positioning of the cabinets.

- Center the Cabinetizer[™] under the load, making sure the weight of the load is balanced on the lift.
- Operate the winch to raise cabinets into place.
- Level cabinets and fasten in place.



Optional Accessories for your Cabinetizer ™

Call 1-800-448-0822 or email <u>sales@paragonpromfg.com</u> for more information.

DFILL DFIVE

Your Cabinetizer™



Raise your cabinets into place even faster and smoother with the Drill Drive[™] winch option 1013 for your Cabinetizer[™].

This product contains trace amounts of the following items which are known to cause. These chemicals are not hazerdous under product's intended use.

Please review CAS# for more information.

| Chemical | Hazard | CAS# | % By Weight |
|--------------------------------------|-----------------------|-----------|-------------|
| Arsenic | Cancer | 7440-38-2 | Trace |
| Cadmium | Developmental | 7440-43-9 | Trace |
| Chromium | Cancer, Developmental | 7440-47-3 | Trace |
| Ethylbenzene | Cancer | 100-41-4 | Trace |
| Lead | Cancer | 7439-92-1 | Trace |
| Methanol | Developmental | 67-56-1 | Trace |
| Methylene Chloride (Dichloromethane) | Cancer | 75-09-2 | Trace |
| Nickel | Cancer | 7440-02-0 | Trace |
| Propylene glycol monobutyl ether | Cancer | 5131-66-8 | Trace |
| Toluene | Developmental | 108-88-3 | Trace |
| Carbon Black | Cancer | 1333-86-4 | Trace |

PARAGON PRO MANUFACTURING SOLUTIONS INC LIMITED WARRANTY

TELPRO INC products manufactured by PARAGON PRO MANUFACTURING SOLUTIONS INC are warranted to be free from defects in material and workmanship under normal use for one year from date of purchase.

| NOTE: The following components of the PANELLIFT [®] Model 439 Drywall Lift are warranted to be free from defects in material and workmanship under normal use for three years from date of purchase. | | | |
|--|--|-------|----------------------------|
| Part# | Description | | |
| 52-03 | #35 chain assembly | 52-05 | #40 chain assembly |
| 52-07 | #50 chain assembly | 52-09 | 1 1/4" #50 roller assembly |
| 52-10 | #Outer planet set w/ bronze | 52-11 | Drive assembly |
| 52-11 | #1/2" x 2 1/4" Shoulder bolt w/ fastners | 52-15 | Clutch assembly w/sprocket |
| 52-16 | #40 Winch drive chain | | |

If a TELPRO INC product is proven to be defective in material or workmanship within the covered time frame from the date of purchase, return the defective part to PARAGON PRO MANUFACTURING SOLUTIONS INC and we will either repair or replace the part at our option. We will neither assume nor authorize any other person to assume for us any other liability.

Written notice including commercial invoice detailing the nature of the defect, date of purchase, and the company from which you purchased your unit must be received and acknowledged by PARAGON PRO MANU-FACTURING SOLUTIONS INC before any units may be returned. Shipping costs shall be the responsibility of the product purchaser.


This warranty shall not apply to any equipment that has been repaired or altered outside of the factory in any way so as in our judgment to affect its stability or reliability nor which has been subjected to abuse, misuse, or negligence.

PARAGON PRO MANUFACTURING SOLUTIONS INC reserves the right to make changes or improvements in design without incurring obligation to install the same on previous units.

PARAGON PRO MANUFACTURING SOLUTIONS INC shall not be liable for loss, damage, or expense directly or indirectly from use of its products, their transportation, their repair, or from any other cause. Acceptance of the manufacturer's product constitutes agreement to the terms of this warranty and further that the manufacturer shall have no liability for any special or consequential damages.

This Warranty is in lieu of all warranties express or implied.

| Fill in the following information, attach a copy of yo | our sales receipt or invoice and file in a safe place. |
|--|--|
| Date of purchase:// | |
| Name& model# | |
| Serial #· | |

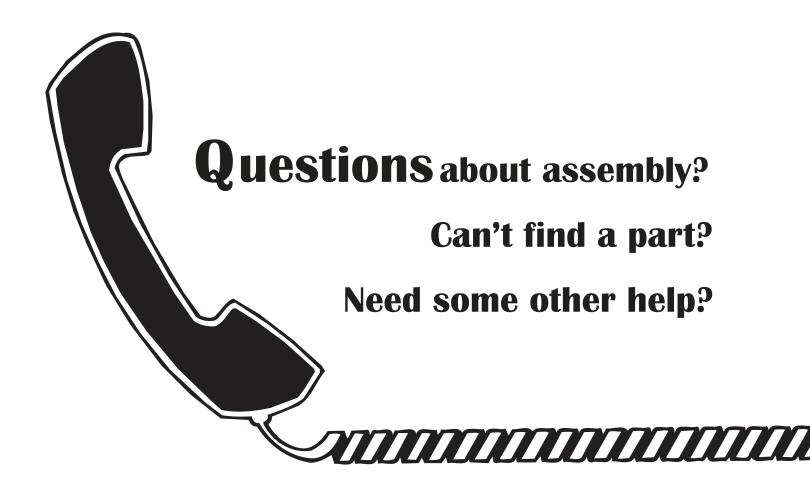

1.800.448.0822 701.775.0551

We'll get you set up!